
Fasten T-Nut with Screw and then insert into T-Track

0 R

T-Nut rotates to locked position once inside the T-Track

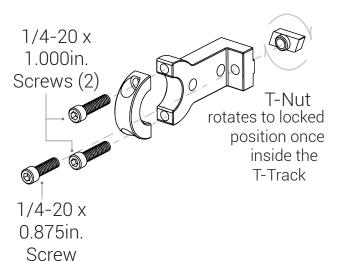

1/4-20 x 1.000in. Screws (2) 1/4-20 x 1.250in. Screw

Bracket
Spacer
*supplied as
needed, for
instances with
extended arm
rests

Fasten T-Nut with Screw and then insert into T-Track



www.ideasfil.com

T-Nut Brackets

CONTACT

P. 416.646.4361

F. 416.646.4358

www.ideasfil.com

16 Malley Road Scarborough, Ontario M1L 2E2



Part # 6446

*only use mounting plates on the devices which they are designated for